

## 460 FORD HEADER ADAPTER

Locate the special bolts in the installation kit. They should be packaged alone and have a reduced head diameter, also marked with an “S” stamped near the hole. Install the special bolts and torque to 35 ft. lbs. Place the SS discs to cover the time bolt cutouts. On the headers side use studs where ever possible. Make sure studs screw into adapter to full depth. Torque coarse thread studs to 35 ft. lbs. If bolts have to be used make sure the use as much thread depth as possible and torque to 35 ft. lbs.

Our tests show the threads start to become damaged at 45 to 50 ft. lbs and strip at 55 to 60 ft. lbs.

Adapters will no be warrantied for stripped threads.