


HARDIN

11 Industry Dr. Palm Coast, FL 32137 MARINE 386-445-2500 / FAX 386-445-1122


PART NO. 620-38000 620-38100

TITLE: SEAWARD BBC MANIFOLDS INSTALLATION 620-38000 & 620-38100

www.hardin-marine.com

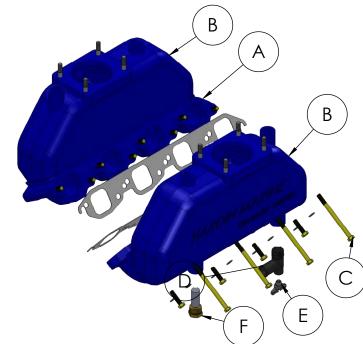

MANIFOLDS COME BLACK. SHOWN IN BLUE FOR INSTRUCTION PURPOSES.

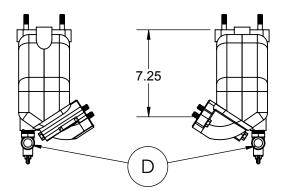

INSTALLATION INSTRUCTIONS:

1) MAKE SURE CYLINDER HEAD EXHAUST MOUNTING SURFACE IS FREE OF KNICKS AND ANY OLD GASKET MATERIAL IS REMOVED. SEALANT IS NOT REQUIRED ON THE NEW SUPPLIED GASKETS, FIG.

2) THE PORT AND STARBOARD MANIFOLDS ARE THE SAME PART. AND CAN BE USED ON EITHER SIDE OF THE ENGINE, FIG. B. 3) INSTALL MANIFOLDS WITH THE SUPPLIED 3/8 BOLTS AND WASHERS. APPLY ANTI-SIEZE TO 3/8 MOUNTING BOLTS, FIG.C. TORQUE TO 30 FT. LBS...

4) SIDE VIEW BELOW AND ISSOMETRIC VIEW TO THE LEFT SHOWS PORT SIDE TYPICAL WATER INLET POSITION. INSTALL 1" HOSE BARB FITTING INTO BOTTOM OF THE MANIFOLD, FIG. D. NO ADDITIONAL SEALANT IS NEEDED. CAREFULL NOT TO CROSS THREAD THE FITTING. DO NOT OVER TIGHTEN.


5) INSTALL DRAIN PLUG, FIG E, INTO THE BOTTOM OF THE INLET FITTING.

6) INSTALL 3/4 ANODE PLUG, FIG. F, INTO THE OPPOSITE WATER INLET BUNG. NO ADDITIONAL SEALANT IS NEEDED.


7) ATTACH 1" WATER INLET HOSE FROM THERMOSTAT HOUSING TÓ FIG. E FITTINGS (MAKE SURE IT IS A CONSTANT FLOW WATER SUPPLY).

8) GO TO 620-38036 TAILPIPE INSTRUCTIONS TO COMPLETE IŃSTALLATION.

CAUTION** HARDIN MARINE MANIFOLD SYSTEMS ARE DESIGNED FOR USE ON ENGINES WITH FULL TIME CONSTANT WATER CIRCULATION AT ALL TIMES. NOTE** AFTER APPROXIMATELY 2-5 HOURS USE OR NUMEROUS ENGINE HEAT CYCLES ALL HARDWARE MUST BE RETORQUED AND OR TIGHTENED.

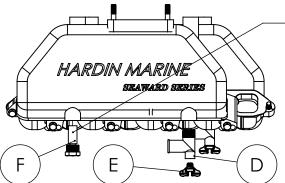

WARNING** ANODES ARE A SERVICEABLE PART AND SHOULD BE INSPECTED ROUTINELY DEPENDING ON THE NATURE OF THE BOATING ENVIRONMENT.

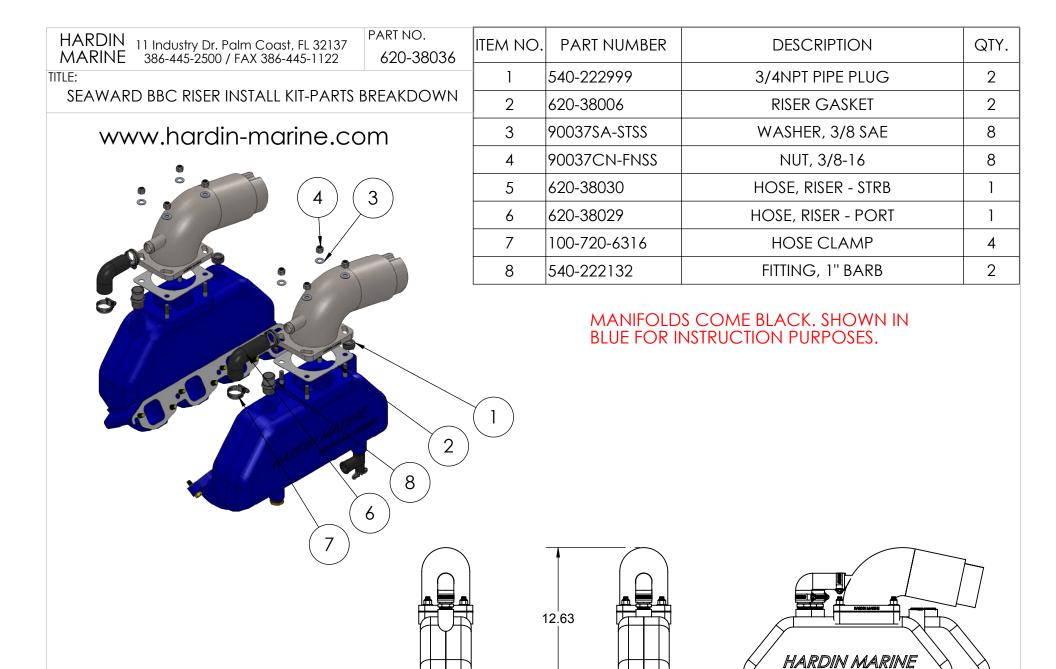

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.

PART NO. 620-38036

TITLE:

SEAWARD BBC RISER INSTALLATION

www.hardin-marine.com

INSTALLATION INSTRUCTIONS:

1) APPLY LIQUID THREAD SEALANT TO THE SUPPLIED 1" HOSE BARB FITTING & 3/4 NPT PIPE PLUGS.

2) INSTALL 1" HOSE BARB FTTINGS INTO FRONT OF THE MANIFOLDS, FIG. A.

3) INSTALL 3/4NPT PIPE PLUGS INTO THE REAR OF THE MANIFOLDS, FIG.B.

4) APPLY ANTI-SIEZE TO THE 8 STUDS, FIG. C.

5) SLIDE GASKETS OVER STUDS, FIG. D. DO NOT USE SEALANT ON THE GASKETS.

6) INSTALL RISERS, FIG. E.

7) IF YOU ARE INSTALLING 620-38051 SHIFT BRACKET AND 620-38050 OIL FILTER RELOCATION BRACKET, INSTALL THEM NOW. USE THE INSTRUCTIONS THAT CAME WITH THOSE KITS.

8) INSTALL WASHERS AND NUTS, FIG F. TORGUE TO 30 FT. LBS..

9) INSTALL JUMPER HOSE AND HOSE CLAMPS. STARBOARD SIDE IS SHORTER HOSE, FIG.G.

MANIFOLDS COME BLACK. SHOWN IN BLUE FOR INSTRUCTION PURPOSES.

CAUTION** HARDIN MARINE MANIFOLD SYSTEMS ARE DESIGNED FOR USE ON ENGINES WITH FULL TIME CONSTANT WATER CIRCULATION AT ALL TIMES. NOTE** AFTER APPROXIMATELY 2-5 HOURS USE OR NUMEROUS ENGINE HEAT CYCLES ALL HARDWARE MUST BE RETORQUED AND OR TIGHTENED.

G

PART NO. 620-38035 620-380357

TITI F:


SEAWARD STD. BRAVO HOSE DIAGRAM

www.hardin-marine.com

SEAWARD EXHAUST MANIFOLDS REQUIRE A CONSTANT FLOW OF COOLING WATER. COOLING SYSTEM PLUMBING TO BE PLUMBED FROM THE ENGINES TOP WATER DISCHARGE OR THERMOSTAT HOUSING TO THE BOTTOM INLET PROVISION OF THE EXHAUST MANIFOLD. WATER FLOW VERTICALLY THROUGH THE EXHAUST MANIFOLD AND IS DISCHARGED THROUGH A JUMP CONNECTION HOSE TO THE EXHAUST RISER FOR COOLING.

> SHOWN WITH 620-300100 CROSSOVER w/BYPASS KIT.-

FOR ENGINES WITH A 4 PORT THERMOSTAT HOUSING YOU NEED TO PURCHASE 420-910311 "Y" FITTING.-

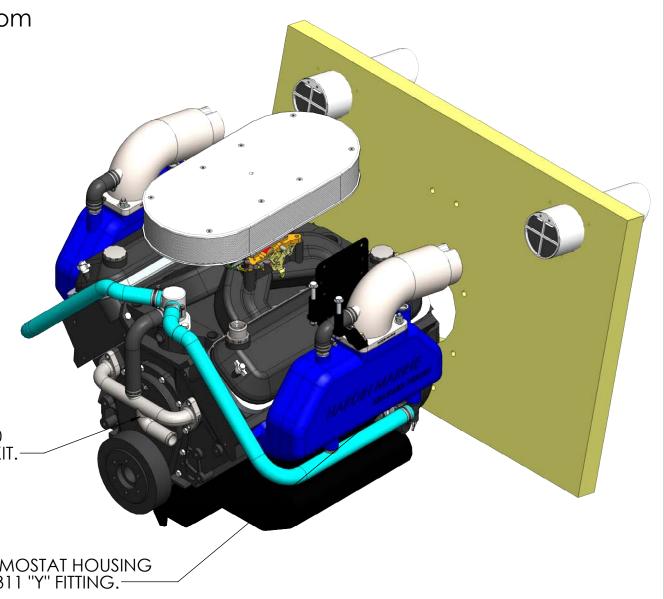

HARDIN

HARDIN 11 Industry Dr. Palm Coast, FL 32137 MARINE 386-445-2500 / FAX 386-445-1122


PART NO. 620-38035 620-38035Z


TITLE:


SEAWARD STD. BRAVO

www.hardin-marine.com

SHOWN WITH OPTIONAL 620-38050 OIL FILTER BRACKET & 620-38051SHIFT BRACKET.—

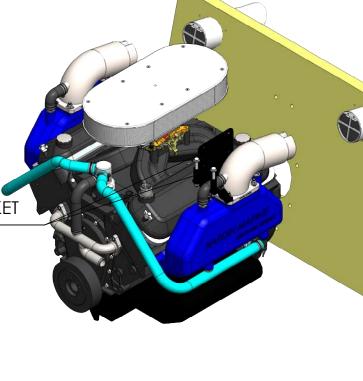

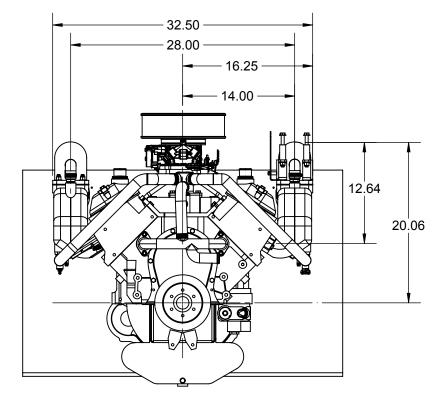

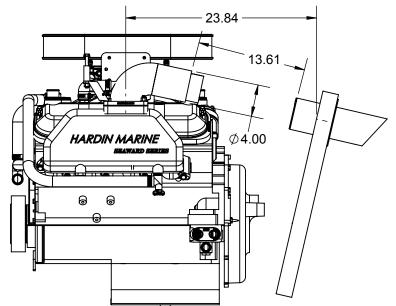


PART NO. 620-38037 620-38037Z


TITLE:

SEAWARD BBC w 3" TALLER STD. RISER

www.hardin-marine.com

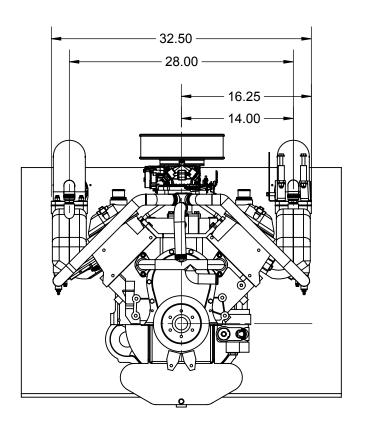

SHOWN WITH OPTIONAL 620-38050 OIL FILTER BRACKET & 620-38051SHIFT BRACKET.-

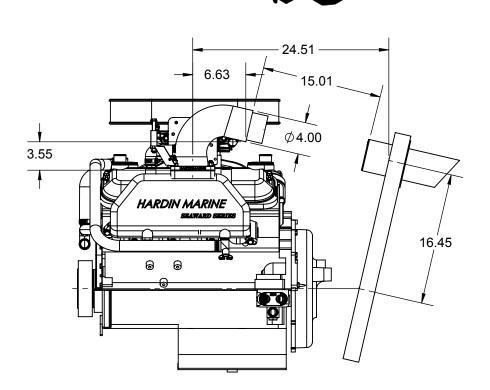


PART NO. 620-38108 620-38108Z


TITLE:


SEAWARD BBC w 6" TALLER STD. RISER

www.hardin-marine.com

SHOWN WITH OPTIONAL 620-38050 OIL FILTER BRACKET & 620-38051SHIFT BRACKET.—

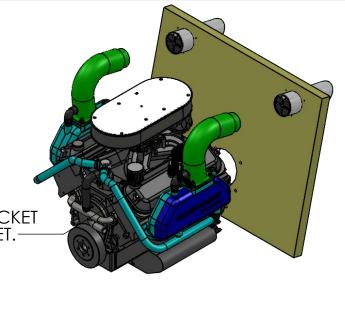

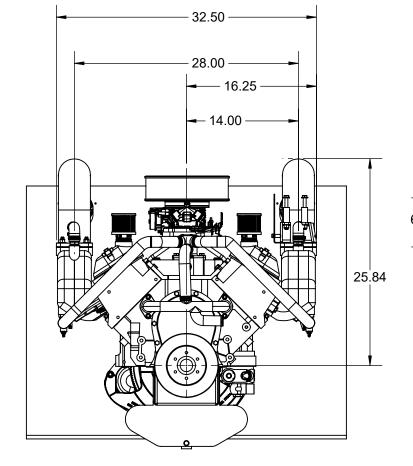

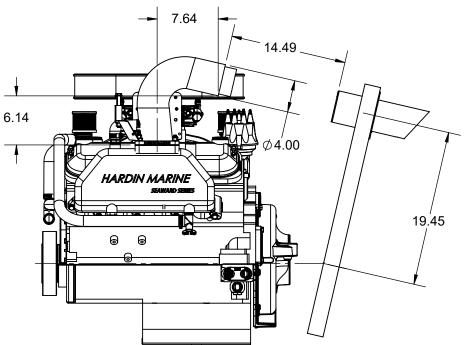


PART NO. 620-38038 620-38038Z


TITLE:

SEAWARD BBC w/ XL RISER

www.hardin-marine.com

SHOWN WITH OPTIONAL 620-38050 OIL FILTER BRACKET & 620-38051SHIFT BRACKET.—

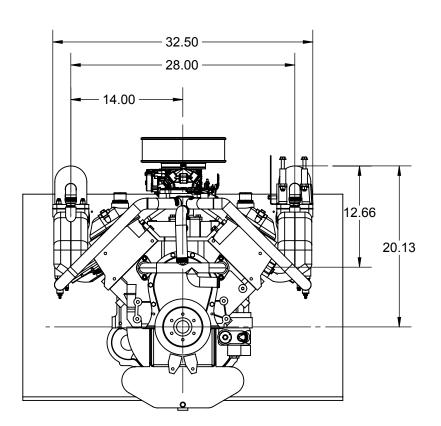

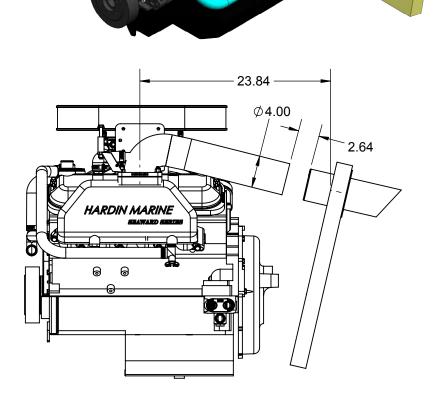


PART NO. 620-38039 620-38039Z


TITLE:


SEAWARD HP500 KIT

www.hardin-marine.com

SHOWN WITH OPTIONAL 620-38050 OIL FILTER BRACKET & 620-38051SHIFT BRACKET.

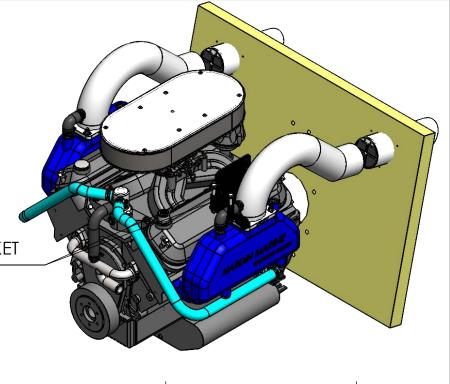

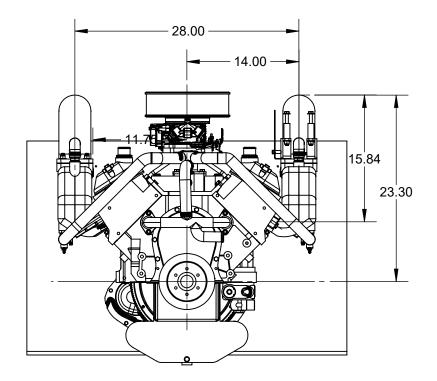

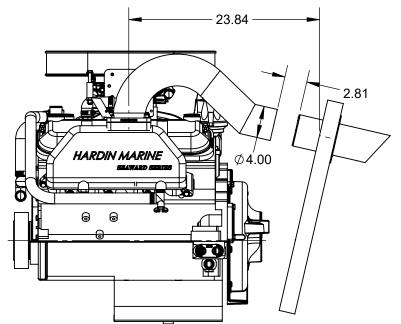

HARDIN

MARINE 11 Industry Dr. Palm Coast, FL 32137 386-445-2500 / FAX 386-445-1122


PART NO. 620-38105 620-38105Z


TITLE:

SEAWARD BBC W/ LOW EXIT TAILPIPES

www.hardin-marine.com

SHOWN WITH OPTIONAL 620-38050 OIL FILTER BRACKET & 620-38051 SHIFT BRACKET.-

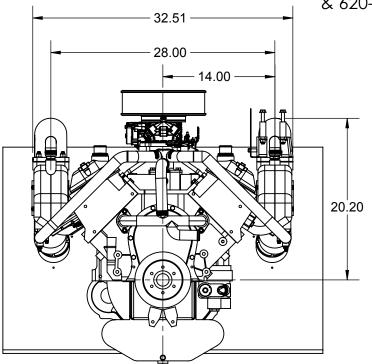

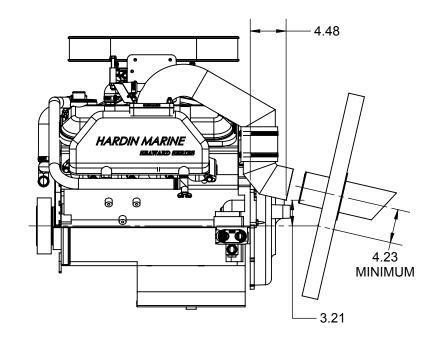

MINIMUM LENGHT IS 9-5/8 WITH 5" OF HOSE AND 12-5/8 WITH 8" OF HOSE. WE SUPPLY KIT WITH 16" OF HOSE AND 4 HOSE CLAMPS. IF YOU NEED IT TO BE LOWER YOU WILL NEED TO BUY MORE 100-200-4004 4" EXHAUST HOSE. MAKE SURE TO HAVE MINIMUM 2-1/2 OF HOSE CLAMPING ON BOTH THE UPPER TAILPIPE AND THE LOWER EXIT. DIMENSIONS ABOVE ARE THE MINIMUM ASSEMBLED HEIGHT.


HARDIN MARINE


11 Industry Dr. Palm Coast, FL 32137 386-445-2500 / FAX 386-445-1122 PART NO. 620-38181

TITLE:

SEAWARD BBC JET BOAT 4" SYSTEM

www.hardin-marine.com

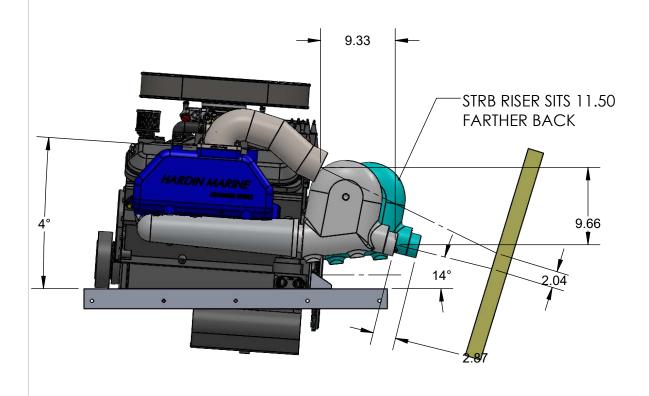


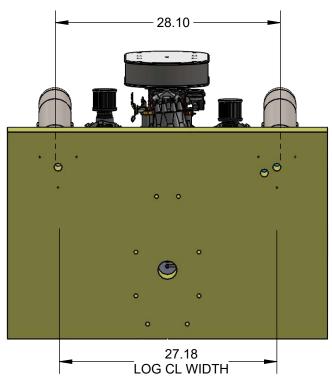

PART NO. HARDIN MARINE 11 Industry Dr. Palm Coast, FL 32137 386-445-2500 / FAX 386-445-1122 620-38050 TITLE:

SEAWARD OIL FILTER BRACKET-PARTS BREAKDOWN

www.hardin-marine.com

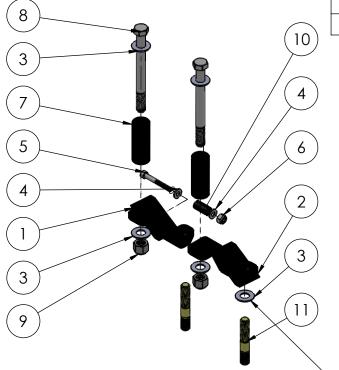

PART NUMBER	DESCRIPTION	QTY.
620-38052	BRKT, OIL FILTER - SEAWARD - STRB	1
620-32500R	BRKT, OIL FILTER - PORT	1
90037SA-STSS	WASHER, 3/8 SAE	5
90010AN-STSS	WASHER, #10 AN	2
90010C150SHS	BOLT	1
90010CN-FNSS	NUT, 10-24	1
620-32500C	SPACER, OIL FILTER RELOCATION	2
90037C400HHS	BOLT, 3/8	2
90037CN-FNSS	NUT, 3/8-16	2
620-38054	SPACER, OIL FILTER BRKT - SEAWARD	1
420-100	STUD, EXHAUST	2
	620-38052 620-32500R 90037SA-STSS 90010AN-STSS 90010C150SHS 90010CN-FNSS 620-32500C 90037C400HHS 90037CN-FNSS 620-38054	620-38052 BRKT, OIL FILTER - SEAWARD - STRB 620-32500R BRKT, OIL FILTER - PORT 90037\$A-\$T\$S WASHER, 3/8 \$AE 90010AN-\$T\$S WASHER, #10 AN 90010C150\$SH\$ BOLT 90010CN-FN\$\$ NUT, 10-24 620-32500C SPACER, OIL FILTER RELOCATION 90037C400HH\$ BOLT, 3/8 90037CN-FN\$\$ NUT, 3/8-16 620-38054 SPACER, OIL FILTER BRKT - SEAWARD

IMPORTANT NOTES:

- 1) ALWAYS USE ANTI-SIEZE ON ALL BOLTS.
 2) TORQUE #10 BOLTS TO 100 IN. LBS...
 3) TORQUE 3/8 BOLTS TO 35 FT. LBS...
 4) PARTS 4,5,6 & 10 ARE ONLY USED WHEN INSTALLING BRACKET WITH 620-38051 SHIFT/ECU BRACKET.
- 5) REPLACE THE EXISTING MANIFOLD STUDS WITH #11 STUDS.

-THIS WASHER IS ONLY USED WHEN INSTALL THIS KIT AND 620-38051 SHIFT/ECU BRACKET

HARDIN MARINE


11 Industry Dr. Palm Coast, FL 32137 386-445-2500 / FAX 386-445-1122

PART NO. 620-38050

TITLE:

SEAWARD OIL FILTER BRACKET-EXPLODED VIEW

www.hardin-marine.com

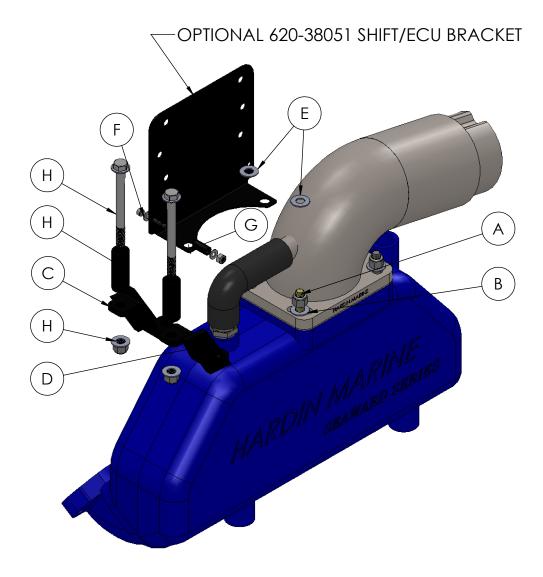

- INSTALLATION INSTRUCTIONS:


 1) SEE PRINT 620-38050 PARTS FOR EXACT LIST OF PARTS THAT COME IN THIS KIT.
- 2) ASSEMBLY SHOWN WITH OPTIONAL 620-38051 SHIFT/ECU BRACKET. IF BRACKET IS NOT USED SKIP LINES 4,5, 7,8 & 9.
- 3) REPLACE THE EXISTING 2 STUDS THAT ARE IN THE MANIFOLD WITH THE SUPPLIED LONGER STUDS, FIG. A. 4) INSTALL WASHER OVER STUD. SEE FIG. B. THIS WASHER IS ONLY USED WITH THE 620-38051 BRACKET!
 5) INSTALL 620-38051 BRACKET OVER THE STUDS.
- 6) SLIDE 620-38052 BRACKET, FIG C, & 620-32500R BRACKET, FIG. D OVER THE 2 STUDS. APPLY ANTI-SIEZE TO THE STUDS. INSTALL WASHER AND NUT FROM HEADER INSTALL KIT, FIG E. DO NOT TIGHTEN NUTS.
- 7) INSTALL #10BOLT WITH WASHER THRU THE 620-38051 BRACKET, FIG. F. 8) POSITION 620-38054, FIG G. SPACER BETWEEN THE 620-38051 & 620-38052 BRACKET.
- 9) APPLY ANTI-SIEZE TO THE BOLT. INSTALL #10 NUT AND WASHER ON THE INSIDE OF 620-38052 BRACKET. TORGUE TO 100 IN. LBS..
- 10) INSTALL FACTORY OIL FILTER BRACKET USING THE LONG 3/8 BOLTS, WASHERS, NUTS & SPACERS. SEE FIG. H.
- 11)NOW TORQUE ALL THE 3/8 NUTS, TO 35 FT. LBS..

PART NO. 620-38050


TITLE:

SEAWARD OIL FILTER BRACKET-DIMENSIONS

www.hardin-marine.com

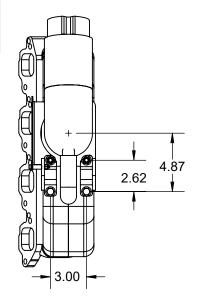

620-38051 SHIFT/ECU BRACKET, NOT INCLUDED IN 620-38050 KIT

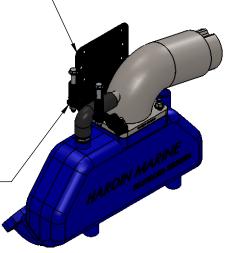

620-38050 OIL FILTER BRACKET

