




625-4203

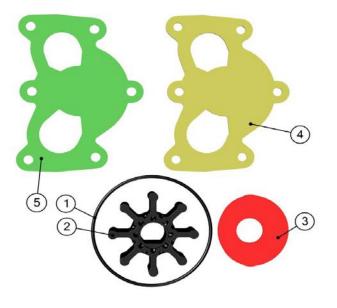

#	PART#	DESCRIPTION	QTY
1	625-1153	O-RING	1
2	625-4011	IMPELLER	1
3	625-4245	WEAR PLATE-INT	1
4	625-4246	WEAR PLATE-REAR	1
5	625-4248	GASKET	1

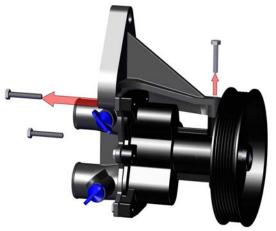

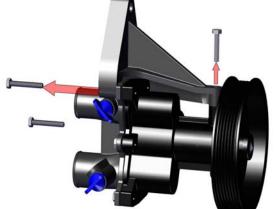

Step 1


- 1. Remove the belt.
- 2. Remove both hoses from the pump.
- 3. Using a 10mm socket, remove the 3 bolts as shown.

Step 2

- 1. Using 10mm socket, remove the 4 remaining bolts as shown.
- Clean gasket from rear cover.
- 3. Save the rear cover




625-4203

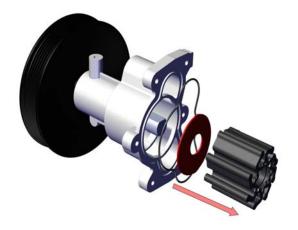

Step 3

- 1. Remove the old impeller, o-ring and internal wear plate.
- 2. Clean the impeller bore.

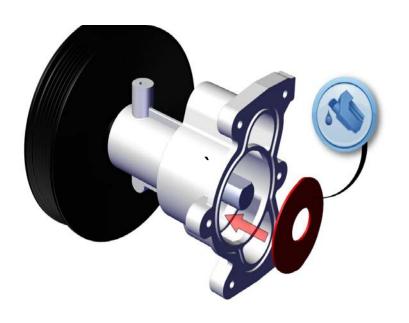


Step 4

Install white lithium grease on the face of the wear plate that the impeller will ride on.

Install wear plate in the body.




- If you did not purchase 625-4209 installation tool go to step 6.
- Attached 625-4208 cone, Fig A, using the stock rear cover bolts.
- 3. Fig. B shows 625-4207 driver.

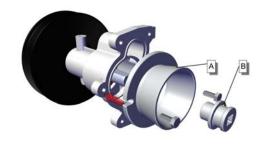





625-4203

   Step 6








4. Push impeller in and remove cone.


Step 7


- 1. Apply white lithium grease to the o-ring and install in the groove.
- 2. Apply white lithium grease to the end of the impeller

Step 8

- 1. Apply Permatex #3 sealant to both sides of the gasket, as shown.
- 2. Apply anti-sieze to the 4 rear cover bolts.
- 3. Install rear cover, gasket & wear plate as shown.
- 4. Lightly tighten bolts.

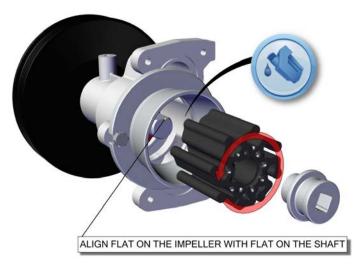


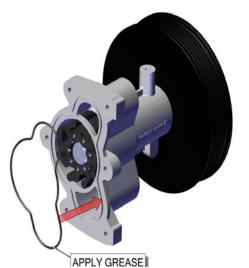

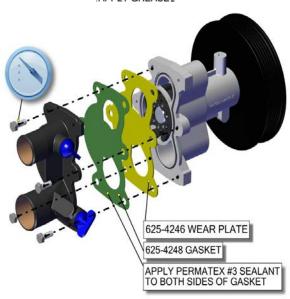



625-4203

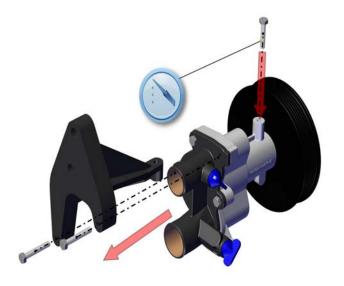



Step 9

- 1. Apply anti-sieze to the remaining 3 bolts.
- 2. Install pump as shown.
- 3. Torque all 7 bolts to 6 ft. lbs..

Step 10

- Attach hoses and belt. Check belt alignment
- 2. As a preventive maintenance, replace the plastic Mercury drain plugs with Hardin stainless steel drain plugs, 625-4289
- Click to add text


HARDIN 11 Industry Dr. Palm Coast, FL 32137 MARINE 386-445-2500 / FAX 386-445-1122

PART NO. 625-4101

TITLE:

GEN 7 EXPLODED VIEW

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	625-4241	SHAFT, GEN 7 SEA PUMP	1
2	625-4240	BODY, GEN 7	1
3	625-4242	BEARING, GEN 7	2
4	625-4005	SEAL, SEA PUMP	1
5	625-4243	RING, SNAP	1
6	625-4244	SEAL, SEA PUMP	1
7	625-4245	WEAR PLATE, INTERNAL	1
8	625-4246	WEAR PLATE, REAR	1
9	625-4247	RING	2
10	625-4248	GASKET, GEN 7	1
11	625-4011	IMPELLER, SEA PUMP	1
12	625-1153	O-RING, GEN 7	1
13	625-4263	HUB, GEN 7 SEA PUMP	1
14	625-4262	PULLEY	1
15	90031AN-STSS	WASHER, 5/16 AN	4
16	90031F075SHS	BOLT, SHCS, 5/16-24x.75	4

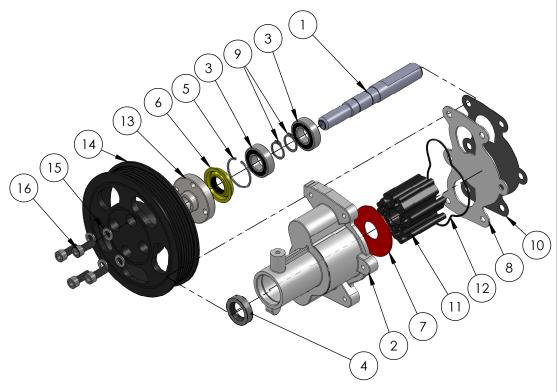

www.hardin-marine.com

PART NUMBERS 13, 14, 15 & 16 ARE PART OF 625-4101 SEA PUMP WITH PULLEY.