

HARDIN MARINE 11 Industry Dr. Palm Coast, FL 32137
386-445-2500 / FAX 386-445-1122

PART NO.
137-9235

TRANSOM BRACKET INSTALLATION INSTRUCTIONS:


- 1) CUTOUT BRACKET TEMPLATE BELOW.
- 2) MOCK UP THE STEERING ASSEMBLY TO INSURE BRACKET IS IN THE CORRECT SPOT. MAKE SURE IT IS ON CRANKSHAFT CENTERLINE. TAPE TEMPLATE TO THE TRANSOM.
- 3) USING THE TEMPLATE CENTER MARKS. DRILL (4) 13/32 HOLES.
- 4) MOUNT CYLINDER ASSEMBLY TO THE TRANSOM WITH THE SUPPLIED 3/8 BOLTS, WASHER AND NUTS. USE THE PROVIDED BACKING PLATE ON THE INSIDE OF THE HULL. APPLY ANTI-SIEZE TO ALL THE THREADS. TORQUE BOLTS TO 30-35 FT LBS.

TITLE: 137-9235 TRANSOM BRACKET DRILL TEMPLATE AND INSTALLATION INSTRUCTIONS

www.hardin-marine.com

PORT SIDE

STARBOARD SIDE

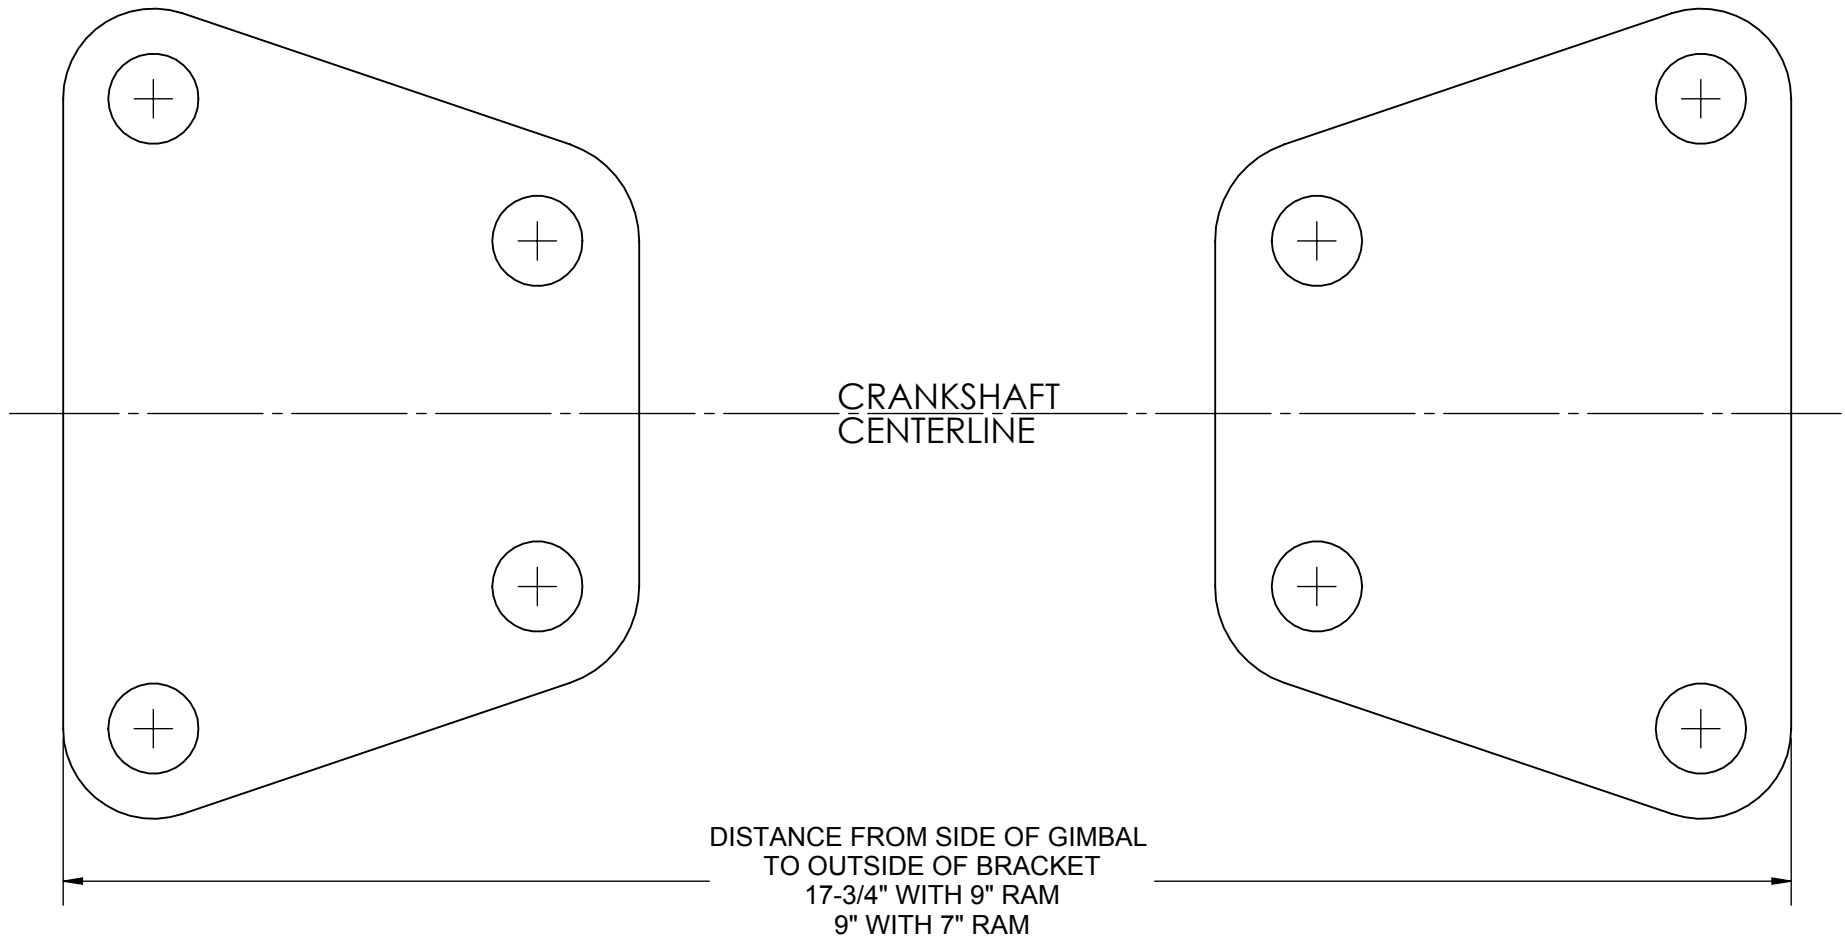

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.