




460 Adapter Plate

Ford 460 to GM 454

Use your Chevy Big Block Exhaust Manifolds on your Ford 460 Engine!

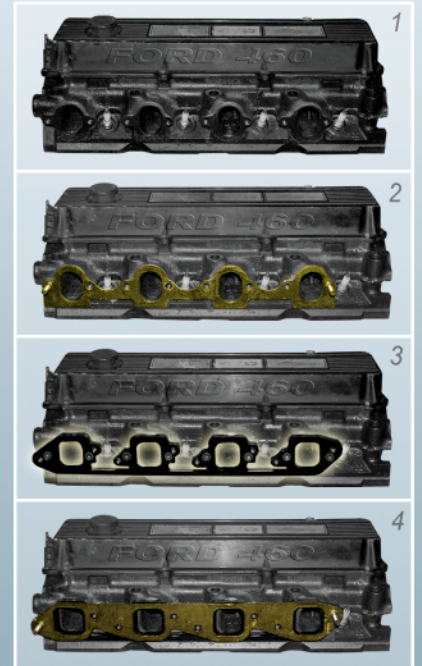

- 1) Clean gasket surface on your Ford 460 cylinder head.
- 2) Add Gasket No. 31710 to Ford cylinder head as shown.
- 3) Add Adapter Plate and install screws No. 22345.
- 4) Add Manifold Gasket No. 33760 to Adapter Plate as shown.
- 5) Install Manifold No. 51240 or 51500 with screws No. 21755.

NOTE: GLM Manifold Gaskets are NOT yellow. These are colored to show installation position.

Complete Manifold Sets with 460 Adapter Plates

No. 58930

OMC - Volvo Penta



No. 58940

MerCruiser




Manifold Adapter Plate Kit

No. 53040

OMC-Volvo & MerCruiser

Ford 460 to GM 454

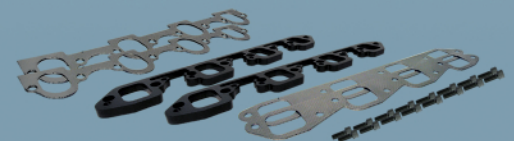

For Cast Iron Manifolds

GLM Products, Inc. • 705 Los Angeles Avenue • Monrovia, CA 91016 USA
(626) 357-0077 TEL • (626) 357-0600 FAX • info@glmmarine.com



www.glmmarine.com