

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.


HARDIN

11 Industry Dr. Palm Coast, FL 32137 MARINE 386-445-2500 / FAX 386-445-1122


PART NO. 620-38000 620-38100

TITLE: SEAWARD BBC MANIFOLDS INSTALLATION 620-38000 & 620-38100

www.hardin-marine.com

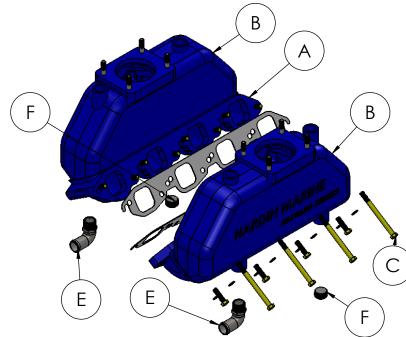

MANIFOLDS COME BLACK, SHOWN IN BLUE FOR INSTRUCTION PURPOSES.

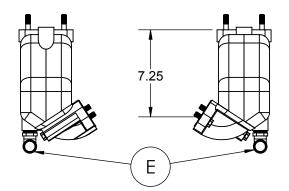

INSTALLATION INSTRUCTIONS:

1) MAKE SURE CYLINDER HEAD EXHAUST MOUNTING SURFACE IS FREE OF KNICKS AND ANY OLD GASKET MATERIAL IS REMOVED. SEALANT IS NOT REQUIRED ON THE NEW SUPPLIED GASKETS. FIG. A.

2) THE PORT AND STARBOARD MANIFOLDS ARE THE SAME PART AND CAN BE USED ON EITHER SIDE OF THE ENGINE. FIG.

3) INSTALL MANIFOLDS WITH THE SUPPLIED 3/8 BOLTS AND WASHERS. APPLY ANTI-SIEZE TO 3/8 MOUNTING BOLTS, FIG.C. TORQUE TO 30 FT. LBS...

4) APPLY LIQUID PIPE THREAD SEALANT TO THE SUPPLIED 1" HOSE BARB FITTINGS AND 3/4 NPT PIPE PLUGS.


5) FIG. D SHOWS PORT SIDE TYPICAL WATER INLET POSITION. INSTALL 1" HOSE BARB FITTING INTO BOTTOM OF THE MANIFOLD, FIG. E..

6) INSTALL 3/4 PIPE PLUG, FIG. F, INTO THE OPPOSITE WATER INLET BUNG.


7) ATTACH 1" WATER INLET HOSE FROM THERMOSTAT HOUSING TO FIG. E FITTINGS (MAKE SURE IT IS A CONSTANT FLOW WATER SUPPLY).


8) GO TO 620-38025 TAILPIPE INSTRUCTIONS TO COMPLETE IŃSTALLATION.


CAUTION** HARDIN MARINE MANIFOLD SYSTEMS ARE DESIGNED FOR USE ON ENGINES WITH FULL TIME CONSTANT WATER CIRCULATION AT ALL TIMES. NOTE** AFTER APPROXIMATELY 2-5 HOURS USE OR NUMEROUS ENGINE HEAT CYCLES ALL HARDWARE MUST BE RETORQUED AND OR TIGHTENED.

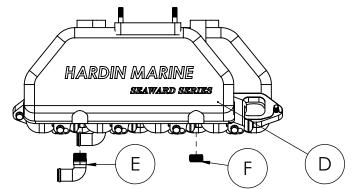

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.

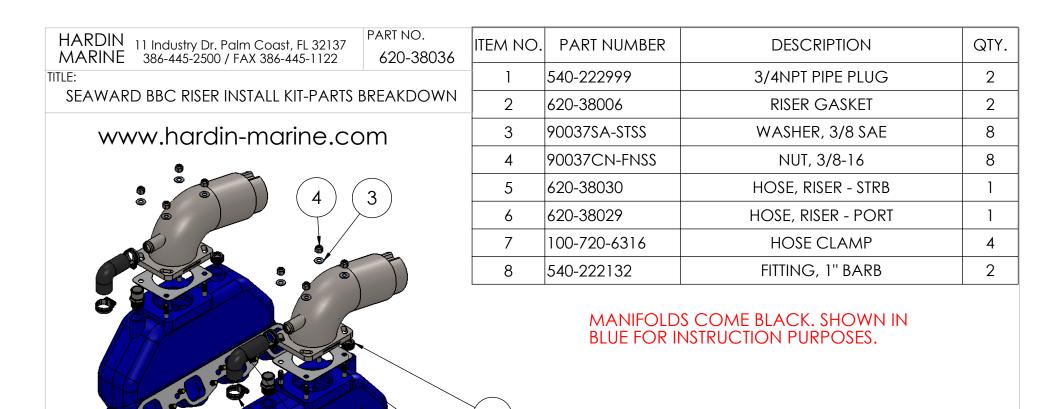

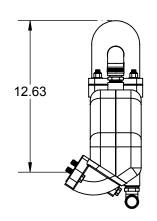

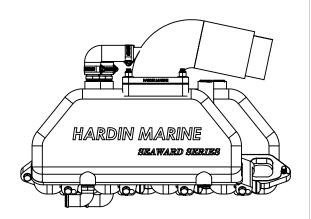

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.

8

HARDIN 11 Industry Dr. Palm Coast, FL 32137 MARINE 386-445-2500 / FAX 386-445-1122 TITI F: SEAWARD BBC RISER INSTALLATION www.hardin-marine.com INSTALLATION INSTRUCTIONS: 1) APPLY LIQUID THREAD SEALANT TO THE SUPPLIED 1" HOSE BARB FITTING & 3/4 NPT PIPE PLUGS. 2) INSTALL 1" HOSE BARB FTTINGS INTO FRONT OF THE MANIFOLDS, FIG. A. 3) INSTALL 3/4NPT PIPE PLUGS INTO THE RÉAR OF THE MANIFOLDS, FIG.B. 4) APPLY ANTI-SIEZE TO THE 8 STUDS. FÍG. C. 5) SLIDE GASKETS OVER STUDS, FIG. D.

DO NOT USE SEALANT ON THE GASKETS.

6) INSTALL RISERS, FIG. E.

7) IF YOU ARE INSTALLING 620-38051 SHIFT BRACKET AND 620-38050 OIL FILTER RELOCATION BRACKET, INSTALL THEM NOW. USE THE INSTRUCTIONS THAT CAME WITH THOSE KITS.


8) INSTALL WASHERS AND NUTS, FIG F. TÓRGUE TO 30 FT. LBS...

9) INSTALL JUMPER HOSE AND HOSE **CLAMPS. STARBOARD SIDE IS SHORTER** HOSE, FIG.G.

MANIFOLDS COME BLACK. SHOWN IN BLUE FOR INSTRUCTION PURPOSES.

CAUTION** HARDIN MARINE MANIFOLD SYSTEMS ARE DESIGNED FOR USE ON ENGINES WITH FULL TIME CONSTANT WATER CIRCULATION AT ALL TIMES. NOTE** AFTER APPROXIMATELY 2-5 HOURS USE OR NUMEROUS ENGINE HEAT CYCLES ALL HARDWARE MUST BE RETORQUED AND OR TIGHTENED.

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.

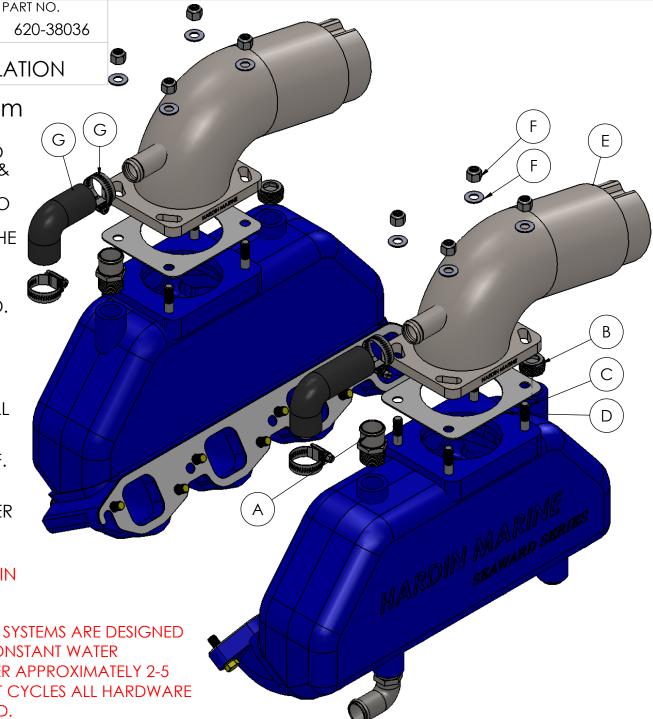

HARDIN 11 Industry Dr. Palm Coast, FL 32137 MARINE 386-445-2500 / FAX 386-445-1122

PART NO. 620-38035/ 620-380357

TITI F:

SEAWARD STD. BRAVO HOSE DIAGRAM

www.hardin-marine.com

SEAWARD EXHAUST MANIFOLDS REQUIRE A CONSTANT FLOW OF COOLING WATER. COOLING SYSTEM PLUMBING TO BE PLUMBED FROM THE ENGINES TOP WATER DISCHARGE OR THERMOSTAT HOUSING TO THE BOTTOM INLET PROVISION OF THE EXHAUST MANIFOLD. WATER FLOW VERTICALLY THROUGH THE EXHAUST MANIFOLD AND IS DISCHARGED THROUGH A JUMP CONNECTION HOSE TO THE EXHAUST RISER FOR COOLING.

> SHOWN WITH 620-300100 CROSSOVER w/BYPASS KIT.-

FOR ENGINES WITH A 4 PORT THERMOSTAT HOUSING. YOU CAN EITHER BUY A 540-222120 FITTING AND CONNECT TO THE BOTTOM BACK PORT ON THE MANFIOLD OR 420-910311 "Y" FITTING.

HARDIN 11 Industry Dr. Palm Coast, FL 32137 MARINE 386-445-2500 / FAX 386-445-1122


PART NO. 620-38039/ 620-38039Z


TITLE:

SEAWARD HP500 KIT

www.hardin-marine.com

SHOWN WITH OPTIONAL 620-38050 OIL FILTER BRACKET & 620-38051SHIFT BRACKET.—

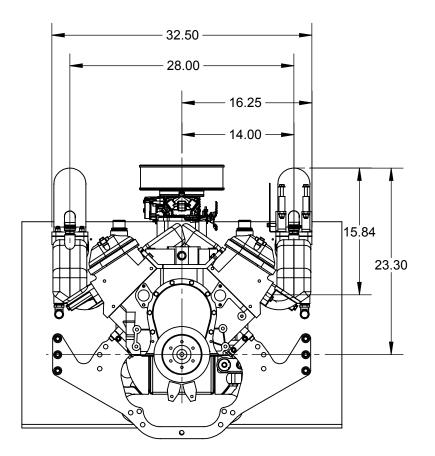

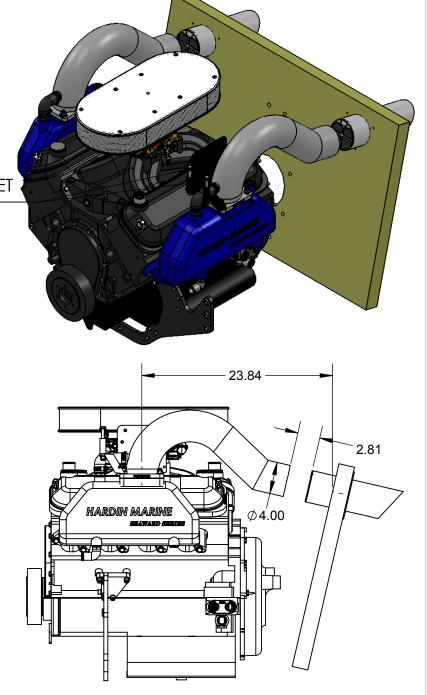

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.


HARDIN
MARINE
11 Industry Dr. Palm Coast, FL 32137
386-445-2500 / FAX 386-445-1122


PART NO. 620-38059

TITLE:

SEAWARD HP500 WET TAILPIPES

www.hardin-marine.com

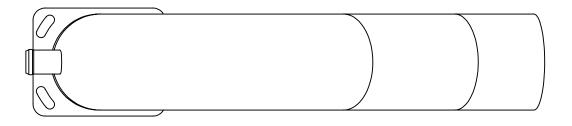

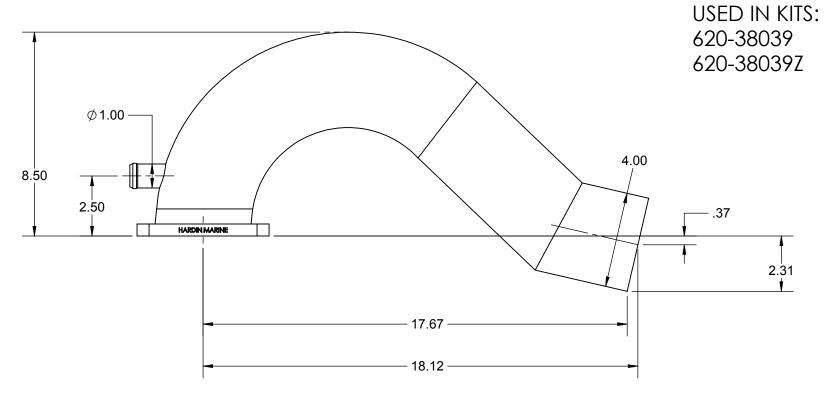

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.