



**HYDRAULIC POWER UNIT**

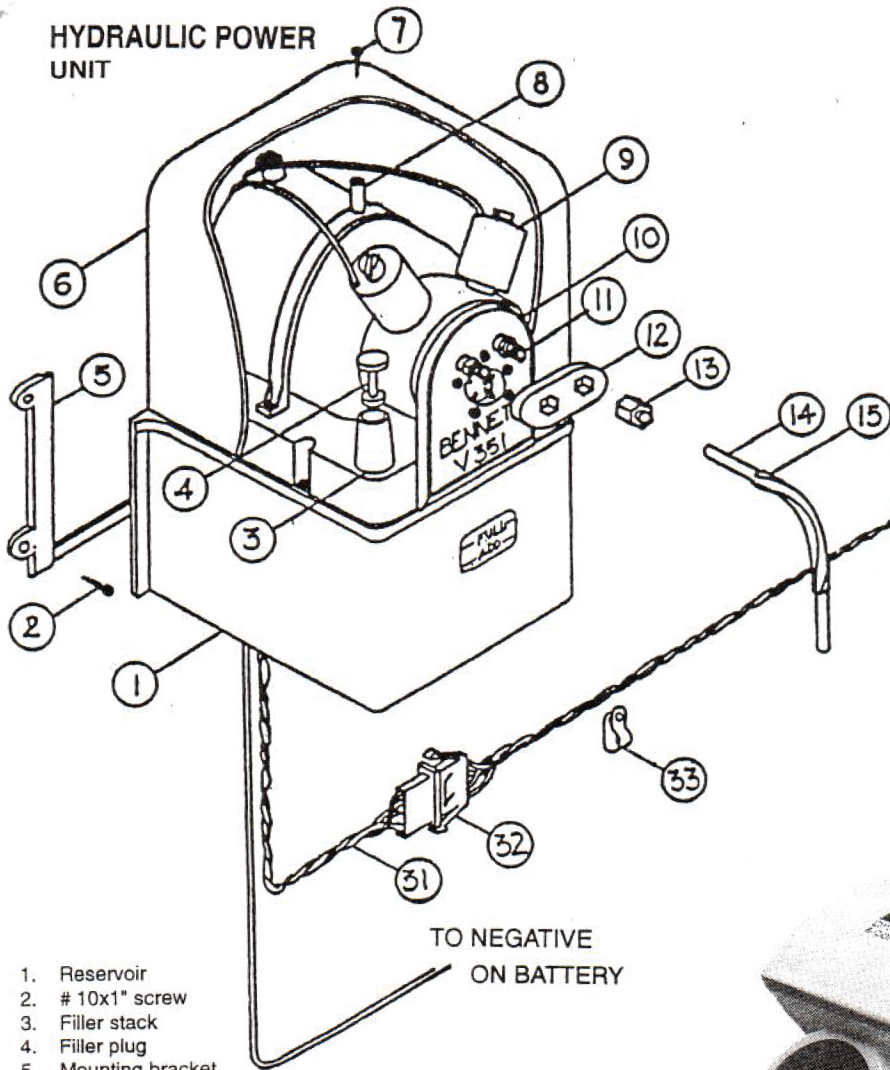


**- IMPORTANT -**  
USE AUTOMATIC TRANSMISSION  
FLUID TO FILL RESERVOIR

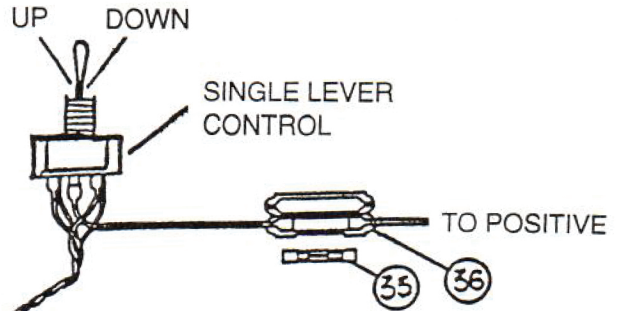


ADJUST JAM NUTS AND  
ROD END BEARINGS TO  
POSITION REVERSE  
GATE AND END NOZZLE

- 1. Reservoir
- 2. # 10x1" screw
- 3. Filler stack
- 4. Filler plug
- 5. Mounting bracket
- 6. Lexan cover
- 7. Type 25 thread-cutting screw
- 8. Motor strap
- 9. Solenoid valve---(4)
- 10. Pump face
- 11. 1/8 pipe to 1/4" tube
- 12. Hex retainer
- 13. Nut w / ferrule
- 14. Hydraulic tubing
- 15. Tube bending clip


TO NEGATIVE  
ON BATTERY

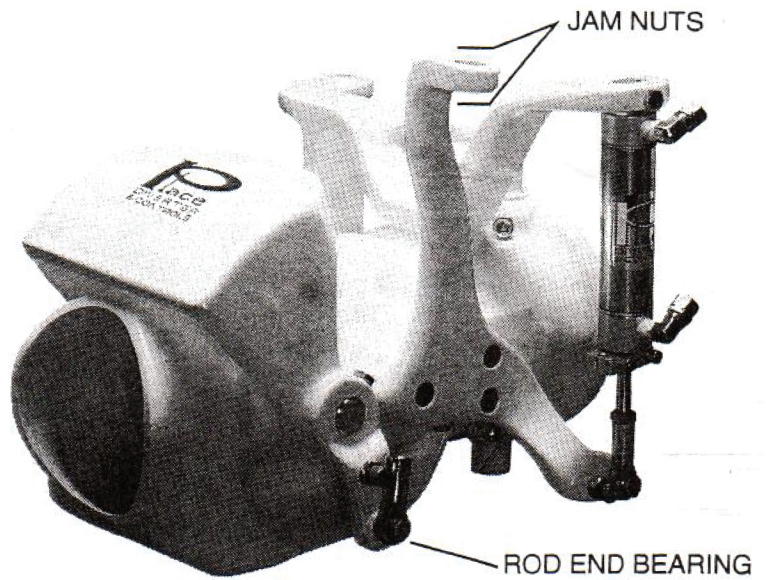

**SUGGESTED TUBING LOCATION**

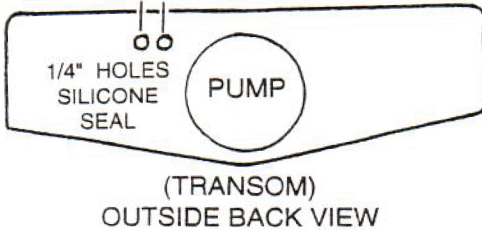

**WIRE LOOM FROM  
POWER UNIT  
(DIAGRAM)**

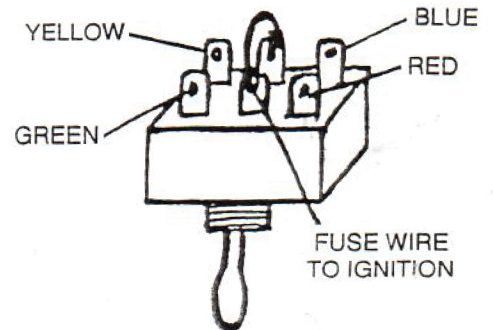


- 31. Wire harness (led down channel in back of reservoir)
- 32. Plug
- 33. Nylon hangers
- 35. 20-amp fuse
- 36. Fuse holder




# **PLACE** **DIVERTER & CONTROLS**

## MOUNTING FOR HYDRAULIC CYLINDER

FRONT VIEW

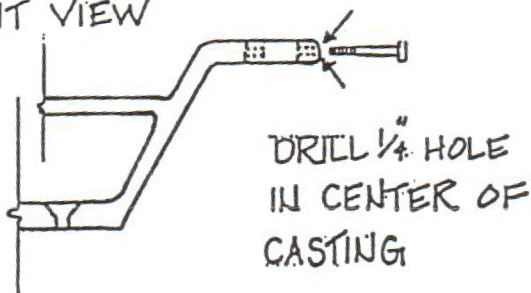

TOP VIEW

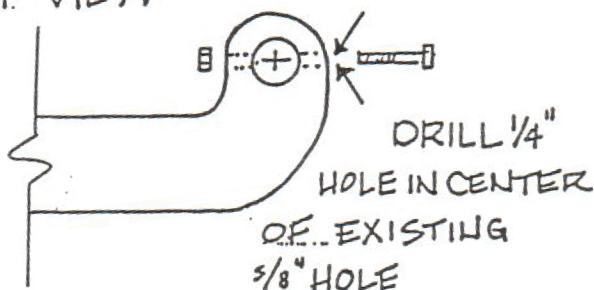

### HYDRAULIC CONVERSION KIT:

Run hydraulic lines thru existing cable hole using new rubber grommet (furnished) silicone seal around voids in rubber grommet.